


27MHz RC development electronics

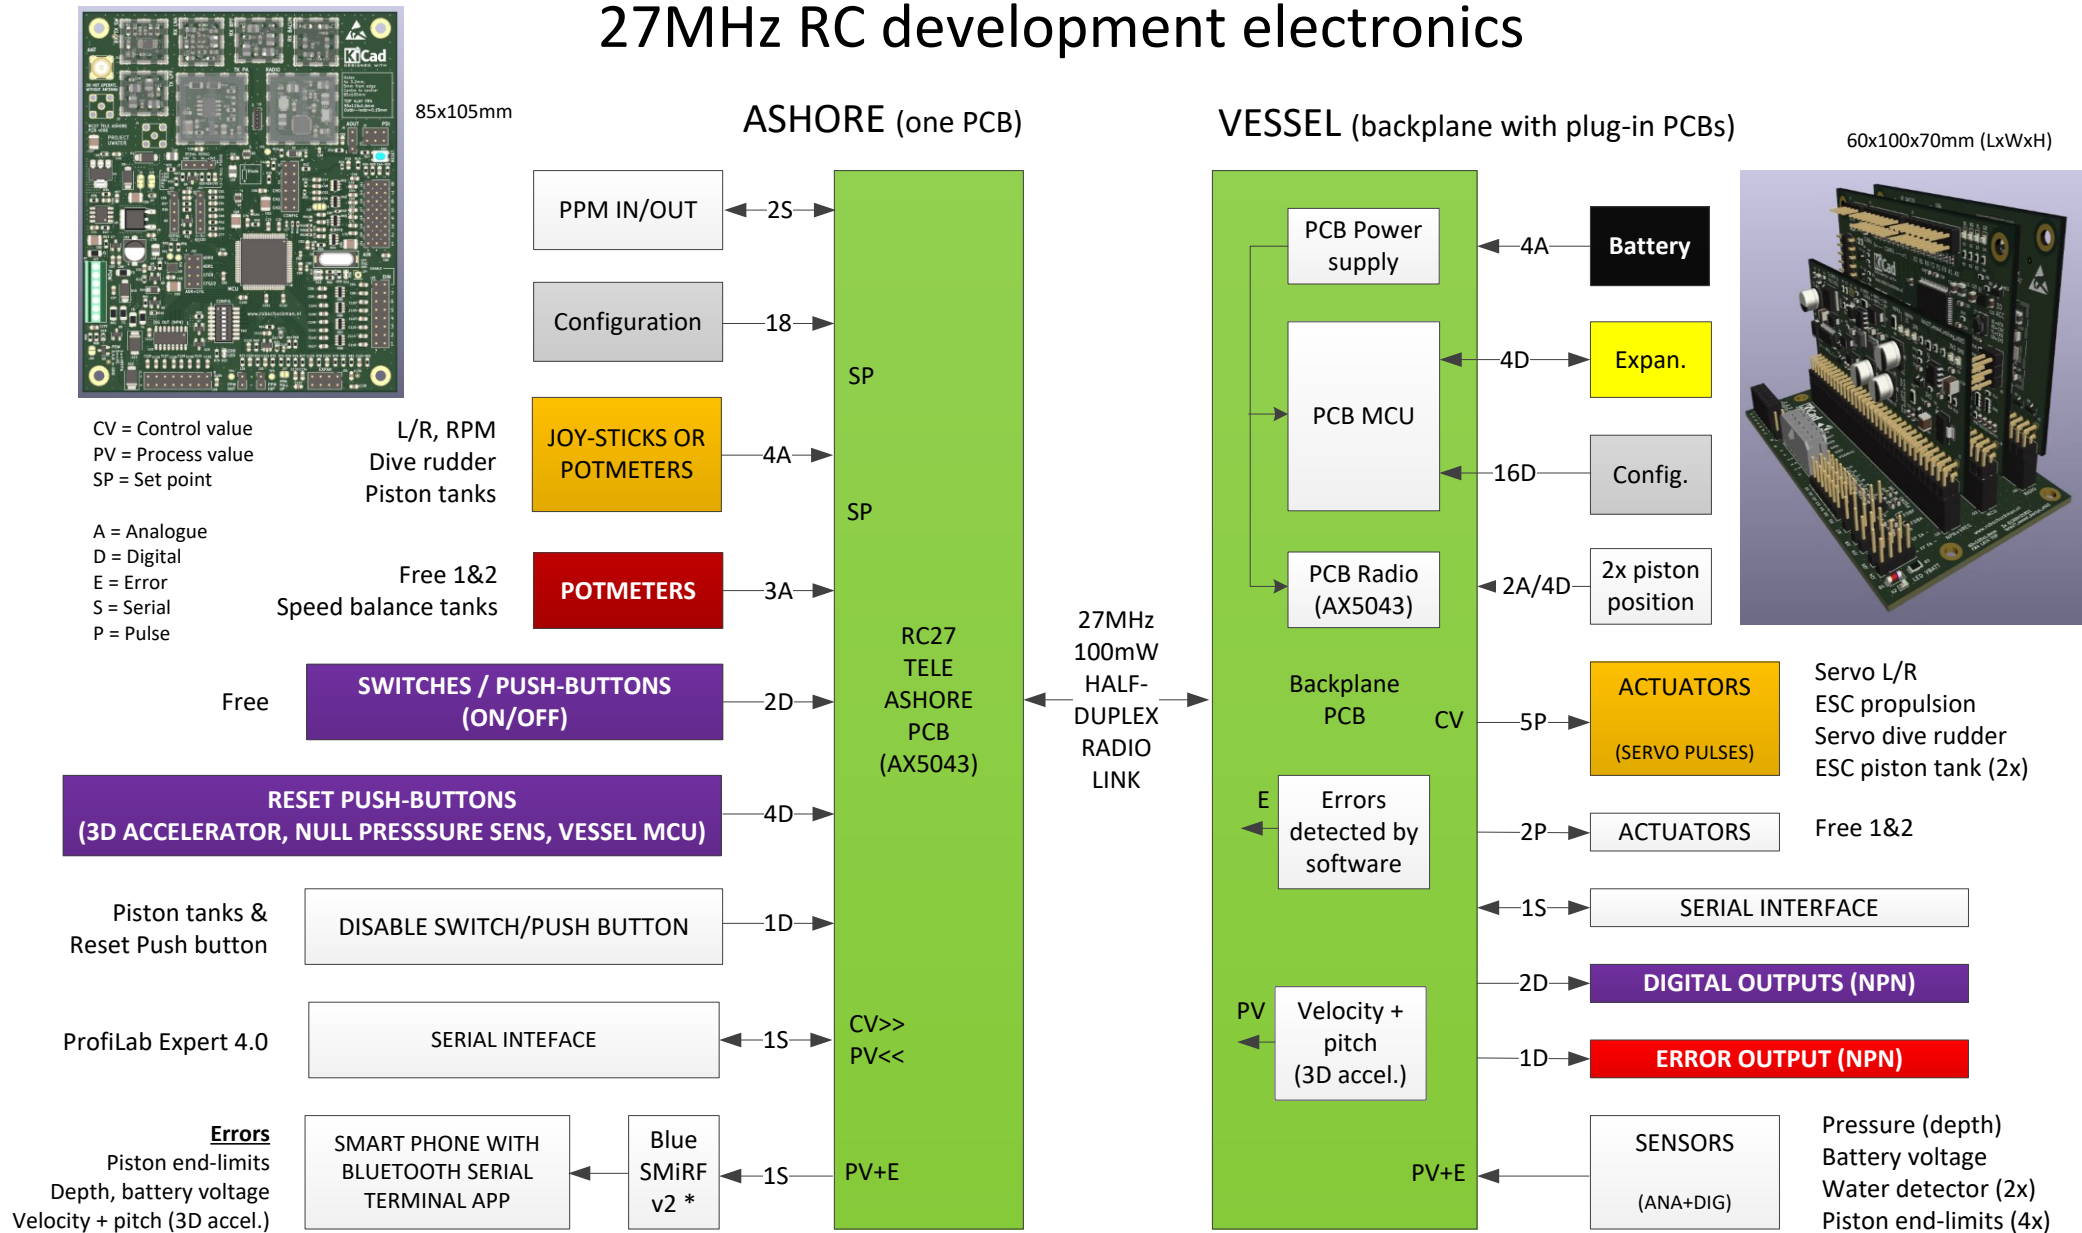

Ashore also transmits when it receives nothing or non-valid data

Vessel transmits only after receiving valid data

Errors: low battery, max pitch, max depth and water leakage

* Blue SMiRF v2 = SparkFun UART to BlueTooth converter

Rev: v004

File: block_dia_rc27_development